



INNOMOUNT

MONTAGE-ANLEITUNG

Picatinny- und Multirail - für Mauser 25


Zielfernrohr und originale Montage demontieren.
Magazin und Verschluss entnehmen.



1 Waffe umdrehen und durch den Magazinschacht die beiden Schrauben (Torx T20) demontieren.



2 Waffe erneut umdrehen und durch Schlitz in der Montage die Schraube mit Hilfe eines langen Gegenstandes z.B. 2mm Inbusschlüssel, Durchschlag, ... (max. $\varnothing 2,6\text{mm}$) lösen, bis sich das Zielfernrohr entfernen lässt.

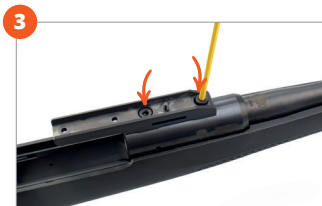

3 Beide Schrauben an der Oberseite der Montage entfernen (Inbus 4mm). Montage nach oben hin von der Waffe abheben.



4 Innogun Picatinny- oder Multirail montieren. Schiene auf die Waffe aufsetzen. Beide mitgelieferten Schrauben (M6x10, Torx T30) anbringen und festziehen (Drehmoment 6Nm).



www.innogun.com




INNOMOUNT

INSTALLATION MANUALL

Picatinny- and Multirail - for Mauser 25

Remove the scope and original mount.
Remove magazine and bolt.

1

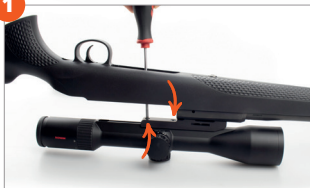

Turn the gun upside down and remove both screws (Torx T20) through the magazin well.

2



Turn the gun again and unscrew the screw through the slot using a long object e.g. 2mm allen key, drift punch, ... (max. $\varnothing 2,6\text{mm}$) until the scope can be removed.

3



Remove both screws on top of the mount (4mm allen key).

4



Place the rail on top of the gun and screw it in place with the screws provided (M6x10, Torx T30). Use maximum torque of 6 Nm.



www.innogun.com